

 
Copy VHS to DVD (One VHS to One DVD)

1. Turn on the monitor (S1) and converter (M1), then wait 20 seconds.

2. Prepare the VHS tape.

- a. Insert the VHS tape.
- b. (Optional; this step is to ensure that the VHS tape is functional)

Press , then wait until the tape reach its end point; Press , then wait until the tape reach its start point; Press



- c. Press  at the point you wish to start recording.

3. Prepare the DVD disc.

- a. Press , and make sure 'DVD' light on the converter panel is on.

- b. Press  to eject the DVD slot.

- c. Insert a blank DVD disc (the DVD-R format is preferred).

 
- d. Press  again to close the DVD slot, then wait until the 'Loading' is complete.

4. Copy the VHS tape to the DVD disc.

- a. Press , and make sure 'VCR' light on the converter panel is on.

- b. Press , then immediately press .

- c. Now, the **VCR → DVD Dubbing** should appear on the monitor (S1). This means the converter is recording the video from VHS to DVD.

- d. Press  when you decide to stop the recording, then wait until the 'Writing to Disc' is complete.

5. (Optional; this step is to customize the default title which is 'VCR LP'.)

Customize the title of DVD.

- a. Press  -> select 'Title list' -> press  -> press  -> select 'Edit' -> press  -> select 'Edit Title Name' -> press  -> Press  to delete the default title.

- b. (For example, the new title is 'Test1') For typing the 'Test1', press  once to print 'T' -> switch to the lowercase

input by pressing  -> press  -> press  to move the cursor -> press  twice to print 'e' -> press  4 times to print 's' -> press  once to print 't' -> switch to the numeric input by pressing  -> press

 -> press  to move the cursor -> press  once to print '1'.

- c. Press  -> select 'Yes' -> press  -> press  ->press  -> wait until the 'Writing to Disc' is complete.

6. Finalize the DVD.

- a. Press  -> select 'DVD Menu' -> press  -> select 'Finalize' -> press  -> select 'Yes' -> press  -> wait until the 'Finalizing' process is complete (**10 minutes at least**).

- b. Press  to eject the DVD slot, then remove the DVD disc.

- c. Press  again to close the DVD slot.

7. Remove the VHS tape.

- a. Press , and make sure 'VCR' light on the converter panel is on.

- b. Press  to eject the VHS slot, then remove the VHS tape.

8. Turn off the converter (M1) and monitor (S1).